

- SIMPLE LOGGER®
THERMOCOUPLE MODULE

L610

L620

L630



Owner's Record

The serial number for the Models L610, L620 and L630 is located on the side of the case. Please record this number and purchase date for your records.

SIMPLE LOGGER THERMOCOUPLE MODULE

MODEL #: _____

SERIAL #: _____

PURCHASE DATE: _____

DISTRIBUTOR: _____

Table of Contents

1. INTRODUCTION	2
1.1 International Electrical Symbols	2
1.2 Receiving Your Shipment	3
1.3 Ordering Information	3
1.3.1 Accessories and Replacement Parts	3
2. PRODUCT FEATURES	4
2.1 Indicators and Buttons	4
2.2 Inputs and Outputs	5
2.3 Mounting	5
3. SPECIFICATIONS	6
3.1 Electrical Specifications	6
3.2 Mechanical Specifications	6
3.3 Environmental Specifications	7
3.4 Safety Specifications	7
4. OPERATION	8
4.1 Software Installation	8
4.1 Recording Data	9
4.3 Using the Software	10
5. MAINTENANCE	11
5.1 Battery Installation	11
5.2 Cleaning	11
APPENDIX A	12
Importing .TXT Files into a Spreadsheet	12
Opening a Simple Logger .TXT file in Excel	12
Formatting the Date and Time	13
Repair and Calibration	15
Technical and Sales Assistance	15
Limited Warranty	16
Warranty Repairs	16

INTRODUCTION

Warning

These safety warnings are provided to ensure the safety of personnel and proper operation of the instrument.

- Read the instruction manual completely and follow all safety information before operating this instrument.
- Use caution on any circuit: Potentially high voltages and currents may be present and may pose a shock hazard.
- Read the specifications section prior to using the data logger. Never exceed the maximum voltage ratings given.
- Safety is the responsibility of the operator.
- For maintenance, use only original replacement parts.
- NEVER open the back of the instrument while connected to any circuit or input.
- ALWAYS connect the leads to the logger before inserting the leads to the test voltage
- ALWAYS inspect the instrument and leads prior to use. Replace any defective parts immediately.
- NEVER use the Simple Logger® Models L610, L620 and L630 on electrical conductors rated above 30V in overvoltage category III (CAT III).

1.1 International Electrical Symbols



This symbol signifies that the instrument is protected by double or reinforced insulation. Use only specified replacement parts when servicing the instrument.



This symbol on the instrument indicates a WARNING and that the operator must refer to the user manual for instructions before operating the instrument. In this manual, the symbol preceding instructions indicates that if the instructions are not followed, bodily injury, installation/sample and product damage may result.



Risk of electric shock. The voltage at the parts marked with this symbol may be dangerous.

1.2 Receiving Your Shipment

Upon receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage. Save the damaged packing container to substantiate your claim.

1.3 Ordering Information

Simple Logger® Thermocouple Model L610..... Cat. #2116.15
(Type J)

Simple Logger® Thermocouple Model L620..... Cat. #2116.16
(Type K)

Simple Logger® Thermocouple Model L630..... Cat. #2116.17
(Type T)


All models are supplied with software (CD-ROM), 6 ft DB-9 RS-232 serial cable, 9V Alkaline battery and user manual.

1.3.1 Accessories and Replacement Parts

One 6 ft RS-232 cable with DB9F **Cat. #2114.27**

Order Accessories and Replacement Parts Directly Online
Check our Storefront at www.aemc.com for availability

PRODUCT FEATURES

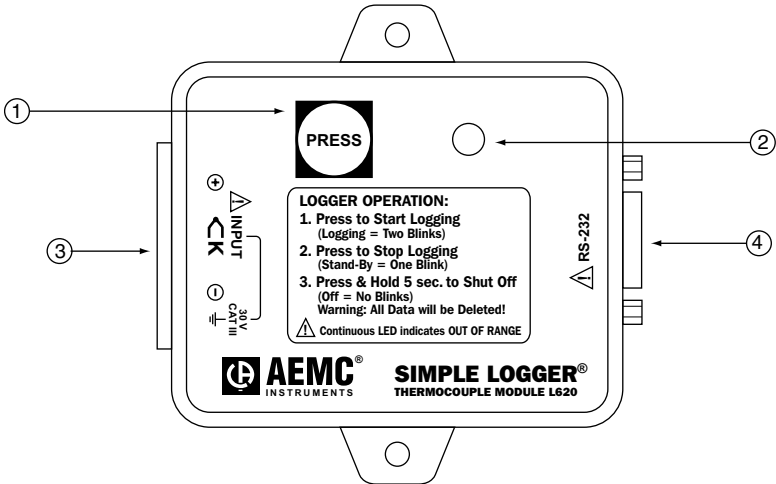

(1) Start/Stop Button

(3) Miniature T.C. Connector

(2) Indicator Light

(4) RS-232 Interface

2.1 Indicators and Buttons

The Simple Logger[®] has one button and one indicator. Both are located on the front panel. The PRESS button is used to start and stop recordings and to turn the logger on and off.

The Red LED indicates the status of the logger:

- **Single Blink:** STAND-BY mode
- **Double Blink:** RECORD mode
- **Continuously On:** OVERLOAD condition
- **No Blinks:** OFF mode

2.2 Inputs and Outputs

The left side of the Simple Logger® incorporates a color-coded miniature T.C. connector that is compatible with the thermocouple for which your logger was designed.

The right side of the logger has a female 9-pin “D” shell serial connector used for data transmission from the logger to your computer.

2.3 Mounting

Your Simple Logger® is equipped with clearance holes in the base plate tabs for mounting. For less permanent mounting, the Velcro® pads (supplied loose) can be attached to the logger and the surface to which the logger will be mounted.

SPECIFICATIONS

3.1 Electrical Specifications

Number of Channels: 1

Measurement Range: L610: 32° to 1380°F (0° to 750°C)
L620: -325° to 2280°F (-200° to 1250°C)
L630: -325° to 660°F (-200° to 350°C)

Input: L610: J Thermocouple
L620: K Thermocouple
L630: T Thermocouple

Input Connection: Miniature color-coded thermocouple jacks
Black-J, Yellow-K, Blue-T

Resolution: 12 Bit (better than 0.5°C)

Sample Rate: 4096/hr max; decreases by 50% each time memory is full

Data Storage: 16,384 readings

Data Storage Technique: TXR™ Time Extension Recording™

Power: 9V Alkaline NEDA 1604, 6LF22, 6LR61

Battery Life Recording: Up to 1 year of recording @ 77°F (25°C)

Output: RS-232 via DB9 connector (4800 Baud)

Reference condition: 23°C ± 3K, 20 to 70% RH, Frequency 50/60Hz, No AC external magnetic field, DC magnetic field ≤ 40A/m, battery voltage 9V ± 10%.

Accuracy: ±0.5% of Reading + 1°C + T/C Accuracy

3.2 Mechanical Specifications

Size: 2-7/8 x 2-5/16 x 1-5/8" (73 x 59 x 41mm)

Weight (with battery): 5 oz (140g)

Mounting: Base plate mounting holes or Velcro® pads

Case Material: Polystyrene UL V0

3.3 Environmental Specifications

Operating Temperature: -4 to 158°F (-20 to 70°C)

Storage Temperature: -4 to 176°F (-20 to 80°C)

Relative Humidity: 5 to 95% non-condensing

Temperature Influence: 0.1%/°C over full temperature range

3.4 Safety Specifications



Working Voltage: EN 61010, 30V, Cat III

**All specifications are subject to change without notice*

OPERATION

4.1 Software Installation

Minimum Computer Requirements

- Windows® 98/2000/ME/NT and XP
- Processor - 486 or higher
- 8MB of RAM
- 8MB of hard disk space for application, 400K for each stored file
- One 9-pin serial port; one parallel port for printer support
- CD-ROM drive

1. Insert the Simple Logger® CD into your CD-ROM drive.

If auto-run is enabled, the Setup program will start automatically. If auto-run is not enabled, select Run from the Start menu and type in **D:\SETUP** (if your CD-ROM drive is drive D. If this is not the case, substitute the appropriate drive letter).

2. The **Set-up** window will appear.

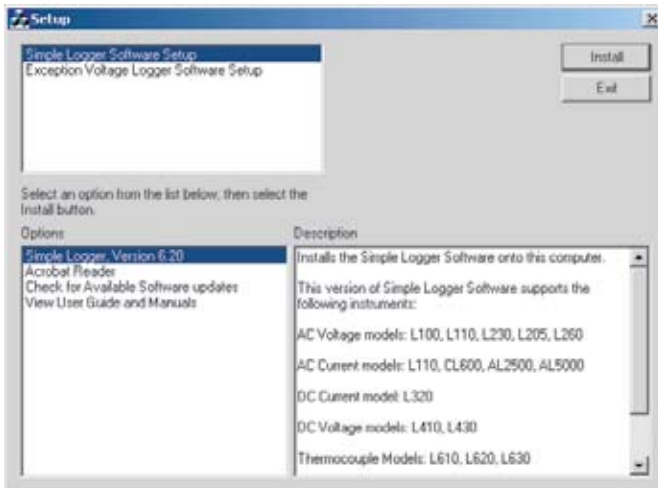


Figure 1

There are a several options to choose from. Some options^(*) require an internet connection.

- **Simple Logger, Version 6.xx** - Installs the Simple Logger[®] software to the computer.
 - ***Acrobat Reader** - Links to the Adobe[®] web site to download the most recent version of Adobe[®] Acrobat Reader. *Acrobat Reader is required for viewing PDF documents supplied on the CD-ROM.*
 - ***Check for Available Software Updates** - Opens the AEMC Software update web site, where updated software versions are available for downloading, if necessary.
 - **View User Guide and Manuals** - Opens Windows[®] Explorer for viewing of documentation files.
3. To install the software, select **Simple Logger Software Setup** in the top section of the Set-up window, then select **Simple Logger, Version 6.xx** in the Options section.
 4. Click the **Install** button and follow the on-screen prompts to install the software.

4.1 Recording Data

- Connect the temperature probe to the logger.
NOTE: Make sure that the temperature sensor is set where you want to measure before starting a recording session.
- Press the **PRESS** button on the front of the logger to begin the recording session. The LED indicator will double-blink to indicate that the recording session has started.
- When the recording session has been completed, press the **PRESS** button to end the recording. The LED indicator will single-blink to indicate that the recording session has ended and the unit is in Stand-by.
- Connect the logger to the computer for data downloading. See the User Guide on the CD-ROM for downloading.

NOTE: If no T.C. element is connected to the logger, an Overload Condition will occur when in record mode or connected to the PC. To eliminate the Overload Condition when in record mode, press the **PRESS** button once to place the instrument into Stand-by.

4.3 Using the Software

Launch the software and connect the RS-232 cable from your computer to the logger.

NOTE: The first time the program is launched you will need to select a language.

Select **Port** from the menu bar and select the Com port (COM 1, 2 3 or 4) you will be using (see your computer manual). Once the software automatically detects the baud rate, the logger will communicate with the computer. (ID number of the logger and number of points recorded displayed).

Select **Function** from the menu bar to select °F or °C.

MAINTENANCE

5.1 Battery Installation

Under normal conditions, the battery will last up to a year of continuous recording unless the logger is restarted very frequently.

In the OFF mode, the logger puts almost no load on the battery. Use the OFF mode when the logger is not in use. Replace the battery once a year in normal use.

If the logger will be used at temperatures below 32°F (0°C) or is frequently turned on and off, replace the battery every six to nine months.

1. Make sure your logger is turned off (no blinking light) and all inputs are disconnected.
2. Turn the logger upside down. Remove the four Phillips head screws from the base plate, then take off the base plate.
3. Locate the two-wire (red/black) battery connector and attach the 9V battery to it. Make sure that you observe polarity by lining up the battery posts to the proper terminals on the connector.
4. Once the connector is plugged onto the battery, insert the battery into the holding clip on the circuit board.
5. If the unit is not in record mode after installing the new battery, disconnect it and press the button twice then reinstall the battery.
6. Reattach the base plate using the four screws removed in Step 2.

Your logger is now recording (LED blinking). Press the **PRESS** button for five seconds to stop the instrument.

NOTE: For long-term storage, remove the battery to prevent discharge effects.

5.2 Cleaning

The body of the logger should be cleaned with a cloth moistened with soapy water. Rinse with a cloth moistened with clean water. Do not use solvent.

APPENDIX A

Importing .TXT Files into a Spreadsheet

Opening a Simple Logger .TXT file in Excel

The following example used with Excel Ver. 7.0 or higher.

1. After opening the Excel program, select “*File*” from the main menu and then select “*Open*”.
2. In the dialog box that appears, browse and open the folder where your logger .TXT files are stored. This will be located in **C:\Program Files\Simple Logger 6.xx** if you accepted the default choice offered by the logger installation program.
3. Next, change the file type to “*Text Files*” in the field labeled Files of Type. All the .TXT files in the logger directory should now be visible.
4. Double-click on the desired file to open the Text Import Wizard.
5. Review the selections in the first wizard screen and make sure that the following choices are selected:
 - Original Data Type: Delimited
 - Start Import at Row: 1
 - File Origin: Windows (ANSI)
6. Click the “*NEXT*” button at the bottom of the Wizard dialog box. The second wizard screen will appear.
7. Click on “*Comma*” in the Delimiters box. A check mark should appear.
8. Click the “*NEXT*” button at the bottom of the Wizard dialog box. The third wizard screen will appear.
9. A view of the actual data to be imported should appear in the lower section of the window. Column 1 should be highlighted. In the Column Data Format window, select “*Date*”.
10. Next, click on “*Finish*” to complete the process and import the data.
11. The data will now appear in your spreadsheet in two columns (A and B) and will look similar to that shown in Figure A-1.

A	B
8	Arms
35401.49	3.5
35401.49	5
35401.49	9
35401.49	13.5
35401.49	17
35401.49	20
35401.49	23.5
35401.49	27.5
35401.49	31
35401.49	34.5
35401.49	38

Figure A-1. Sample Data Imported into Excel.

Formatting the Date and Time

Column 'A' contains a decimal number that represents both date and time. Excel can convert this number directly as follows:

1. Click on column 'B' at the top of the column to select the data, then click on *"Insert"* from the main menu and select *"Columns"* from the drop-down menu.
2. Next, click on column 'A' at the top of the column to select the data, then click on *"Edit"* from the main menu and select *"Copy"* to copy the entire column.
3. Click on cell 1 of column 'B' and then click on *"Edit"* and select *"Paste"* to insert a duplicate of column 'A' into column 'B'. This is necessary if you want to show the date and time in two separate columns.
4. Next, click on the top of column 'A', then click on *"Format"* and select *"Cells"* from the drop-down menu.

5. In the dialog box that opens, select the *“Date”* option from the category list on the left. Select the date format you desire and click on *“OK”* to format the column.
6. Click on the top of column ‘B’, then click on *“Format”* and select *“Cells”* from the drop-down menu.
7. In the dialog box that opens, select the *“Time”* option from the category list on the left. Select the time format you desire and click on *“OK”* to format the column.

Figure A-2 shows a typical spreadsheet with date, time and value displayed. It may be necessary to change the column width to see all the data.

A	B	C
12/02/04	11:45 AM	17
12/02/04	11:45 AM	20
12/02/04	11:45 AM	23.5
12/02/04	11:45 AM	27.5
12/02/04	11:45 AM	31
12/02/04	11:45 AM	34.5
12/02/04	11:45 AM	38
12/02/04	11:45 AM	41.5
12/02/04	11:45 AM	45.5
12/02/04	11:46 AM	49
12/02/04	11:46 AM	52

Figure A-2. Shows Date, Time and Value

Repair and Calibration

To ensure that your instrument meets factory specifications, we recommend that it be scheduled back to our factory Service Center at one-year intervals for recalibration, or as required by other standards or internal procedures.

For instrument repair and calibration:

You must contact our Service Center for a Customer Service Authorization Number (CSA#). This will ensure that when your instrument arrives, it will be tracked and processed promptly. Please write the CSA# on the outside of the shipping container. If the instrument is returned for calibration, we need to know if you want a standard calibration, or a calibration traceable to N.I.S.T. (Includes calibration certificate plus recorded calibration data).

Ship To: Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments
15 Faraday Drive
Dover, NH 03820 USA
Phone: (800) 945-2362 (Ext. 360)
(603) 749-6434 (Ext. 360)
Fax: (603) 742-2346 or (603) 749-6309
E-mail: repair@aemc.com

(Or contact your authorized distributor)

Costs for repair, standard calibration, and calibration traceable to N.I.S.T. are available.

NOTE: You must obtain a CSA# before returning any instrument.

Technical and Sales Assistance

If you are experiencing any technical problems, or require any assistance with the proper operation or application of your instrument, please call, mail, fax or e-mail our technical support team:

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments
200 Foxborough Boulevard
Foxborough, MA 02035 USA
Phone: (800) 343-1391
(508) 698-2115
Fax: (508) 698-2118
E-mail: techsupport@aemc.com
www.aemc.com

NOTE: Do not ship Instruments to our Foxborough, MA address.

Limited Warranty

The Simple Logger® Model L610/L620/L630 is warranted to the owner for a period of one year from the date of original purchase against defects in manufacture. This limited warranty is given by AEMC® Instruments, not by the distributor from whom it was purchased. This warranty is void if the unit has been tampered with, abused or if the defect is related to service not performed by AEMC® Instruments.

For full and detailed warranty coverage, please read the Warranty Coverage Information, which is attached to the Warranty Registration Card (if enclosed) or is available at www.aemc.com. Please keep the Warranty Coverage Information with your records.

What AEMC® Instruments will do:

If a malfunction occurs within the one-year period, you may return the instrument to us for repair, provided we have your warranty registration information on file or a proof of purchase. AEMC® Instruments will, at its option, repair or replace the faulty material.

**REGISTER ONLINE AT:
www.aemc.com**

Warranty Repairs

What you must do to return an Instrument for Warranty Repair:

First, request a Customer Service Authorization Number (CSA#) by phone or by fax from our Service Department (see address below), then return the instrument along with the signed CSA Form. Please write the CSA# on the outside of the shipping container. Return the instrument, postage or shipment pre-paid to:

Ship To: Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments
15 Faraday Drive • Dover, NH 03820 USA
Phone: (800) 945-2362 (Ext. 360)
(603) 749-6434 (Ext. 360)
Fax: (603) 742-2346 or (603) 749-6309
E-mail: repair@aemc.com

Caution: To protect yourself against in-transit loss, we recommend you insure your returned material.

NOTE: You must obtain a CSA# before returning any instrument.



11/05

99-MAN 100214 v9

Chauvin Arnoux®, Inc. d.b.a. **AEMC®** Instruments
15 Faraday Drive • Dover, NH 03820 USA • Phone: (603) 749-6434 • Fax: (603) 742-2346
www.aemc.com